

Drehknöpfe mit Skalen
Adjusting Knobs with scale

Bestell-Nummer Order-No.	Skalen-Einteilung Scale-gradations	d [mm]	D1 [mm]	D2 [mm]	H1 [mm]	H2 [mm]	H3 [mm]	Kerngrösse Coresize
2922 511 90043	0-260V	6	60	78	15	4	24	E1-E6
2922 511 90045	0-270V	6	60	78	15	4	24	E1-E6
2922 511 90046	0-100%	6	60	78	15	4	24	E1-E6
2922 511 90052	0-100%	8	80	106	19	4	28	E6.1-E8
2922 511 90054	0-260V	8	80	106	19	4	28	E6.1-E8
2922 511 90055	0-270V	8	80	106	19	4	28	E6.1-E8
2922 511 90056	0-100%	8	80	125	19	4	28	E6.1-E8.1
2922 511 90058	0-260V	8	80	125	19	4	28	E6.1-E8
2922 511 90059	0-270V	8	80	125	19	4	28	E6.1-E8
2922 511 90071	0-260V	10	100	155	22	5	44	E10

